


## Installation

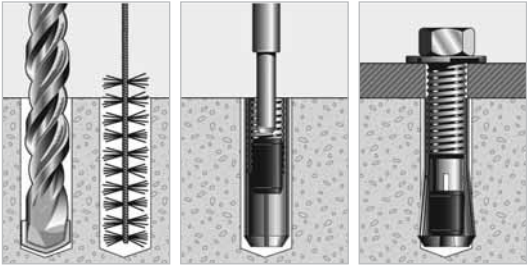

1. Drill the correct diameter hole to the required depth for the Drop-In anchor selected.
2. Clean the hole with a blow out bulb.
3. Push the anchor into the hole.
4. Inset the relevant setting tool of the same diameter as the anchor until it makes contact with the cone. Use a hammer to drive the setting tool into the anchor – stop hammering when the expander shoulder rests against the anchor or when it is blocked (in hard concrete).
5. Tighten to the recommended torque using a torque wrench.